
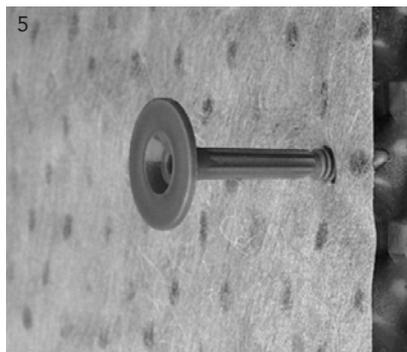
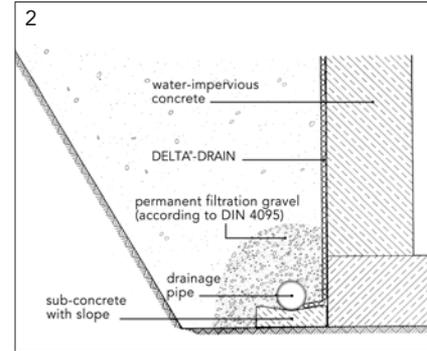


DELTA® protects property. Saves energy. Creates comfort.

DELTA®-DRAIN

Installation Instructions

- 1. Install the dimpled sheet and the geotextile so that they overlap at the edges, holding them in place with DELTA®-HAFTNAGEL. The geotextile should always point outwards, i.e. towards the back-fill side. Remember that the only function of DELTA®-HAFTNAGEL is to assist installation (in the overlap area, for instance), and that they cannot replace the mechanical fasteners applied from the outside.
- 2. Sheets fitted to cellar and retaining walls should not be placed over the drainage pipe but should terminate in the drainrock close to the pipe.
- 3. In roof gardens, sheets should be laid between the roof structure and the water reservoir (e.g. peat).
- 4. Sheets may be nailed down with clout nails, clamped down with wood or plaster hooks, or fastened with a bolt gun.
- 5. We recommend DELTA®-MS DÜBEL for fastening dimpled sheets to some hard material such as concrete or brick masonry: simply drill an 8-mm hole and hammer home the plug.
- 6. The upper sheeting edge should always be protected by DELTA®-NOPPENBAHNEN-PROFIL.

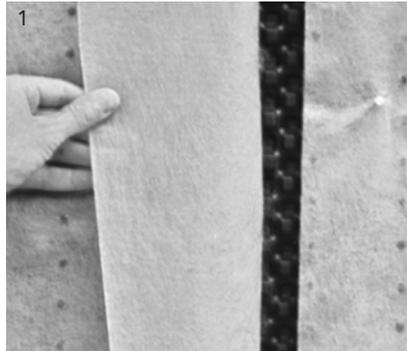

■ Protection and drainage system for compression-resistant surfaces

■ For earth-boundary construction elements

■ For vertical and horizontal application